


ATTO 95

- LED Recessed Downlight
- NON-IC, Indoor, Dry Location
- 120 VAC, 0,2 A, 60 Hz, 24 W
- Class 2 luminaire

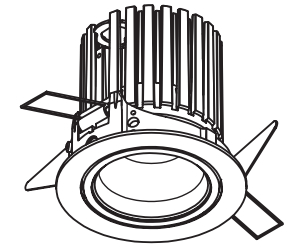

**NE PAS TOUCHER LA PUCE LED (PARTIE JAUNE) À L'INTERIEUR DU LUMINAIRE ! CELA ENDOMMAGE LE LUMINAIRE !
DON'T TOUCH THE LED COB (YELLOW SEGMENT) INSIDE THE FIXTURE ! IT WILL DAMMAGE THE LIGHTING FIXTURE !**

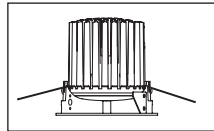


Fig. 1

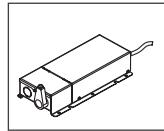


Fig. 2

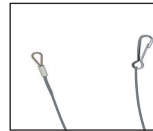


Fig. 3



Fig. 4

Fig. 1 Downlight

Fig. 2 Driver

Fig. 3 Aircraft cable

Fig. 4 Connector

IMPORTANT: Read all instructions before installing luminaire. Retain for future reference.

This housing must be wired in accordance with local electrical codes and ordinances. All work should be performed by a qualified electrician.

Power must be turned OFF from the electrical panel before starting installation or attempting any maintenance.

WARRANTY NOTICE :

DO NOT TURN ON CIRCUIT BREAKER TO BRANCH CIRCUIT UNTIL THE DRIVER & LED TRIM ARE ADEQUATELY WIRED TOGETHER AS POWERING THE DRIVER WITH NO LOAD CAN INCREASE FAILURES.


INSTALLATION : Follow steps 1 through 6 :

1. Cut ceiling opening to 95 mm (3,74 '').
2. Connect power to LED driver and install in ceiling cavity.
3. Connect the luminaire with the driver (View 1).
4. Attach aircraft cable to driver for additional means of securement (View 2).
5. Retrack ceiling tensioners of the luminaire and insert the downlight in the ceiling opening (View 3).
6. Tilt and/or rotate downlight to appropriate aiming angle.

View 1



View 2

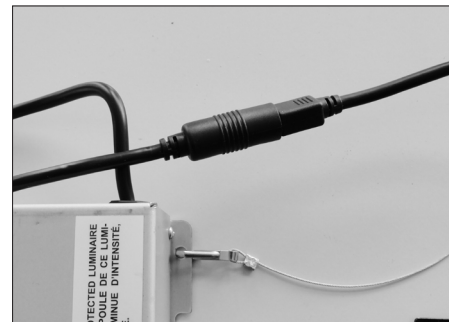

View 3

