

NANO R

- LED Recessed Downlight
- 120 VAC, 0.4 A, 60 Hz, 50 W
- NON-IC, Indoor, Dry Location
- Class 2 luminaire

Installation Instructions



**NE PAS TOUCHER LA PUCE LED (PARTIE JAUNE) À L'INTERIEUR DU LUMINAIRE ! CELA ENDOMMAGE LE LUMINAIRE !
DON'T TOUCH THE LED COB (YELLOW SEGMENT) INSIDE THE FIXTURE ! IT WILL DAMMAGE THE LIGHTING FIXTURE !**

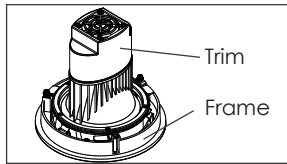


Fig. 1



Fig. 2

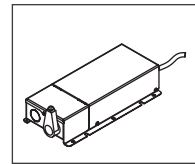


Fig. 3

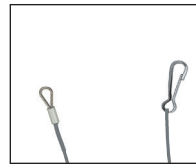


Fig. 4



Fig. 5

Fig. 1 Trim and frame

Fig. 2 Driver

Fig. 3 Aircraft cable

Fig. 4 Connecteur

IMPORTANT: Read all instructions before installing luminaire. Retain for future reference.

This housing must be wired in accordance with local electrical codes and ordinances. All work should be performed by a qualified electrician.

Power must be turned OFF from the electrical panel before starting installation or attempting any maintenance.


INSTALLATION : Follow steps 1 through 7 :

1. Cut ceiling opening to 150 mm ($\approx 6''$).
2. Connect power to LED driver and install in ceiling cavity.
For T-bar ceiling applications slide LED Driver unto "T" using T-bar LED Driver Bracket.
3. Install frame (Fig. 2) in the ceiling opening and fasten screws to secure to ceiling.
4. Connect the luminaire with the driver (View 1)
5. Attach aircraft cable to driver for additional means of securement (View 2 +3).
6. Put trim into the frame (View 4).
7. Tilt and/or rotate downlight to appropriate aiming angle.


View 1



View 2

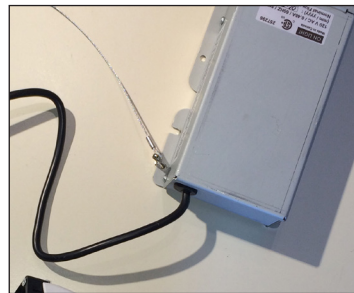

View 3

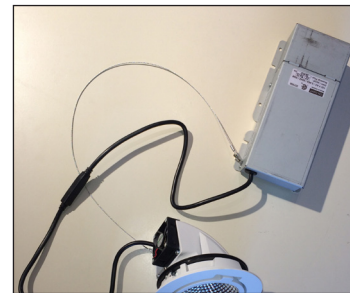

View 4

